


WHEN PROVIDING US WITH YOUR MEASUREMENT PLEASE PROVIDE THE SMALLEST MEASUREMENT BETWEEN YOUR ALREADY EXISTING POSTS

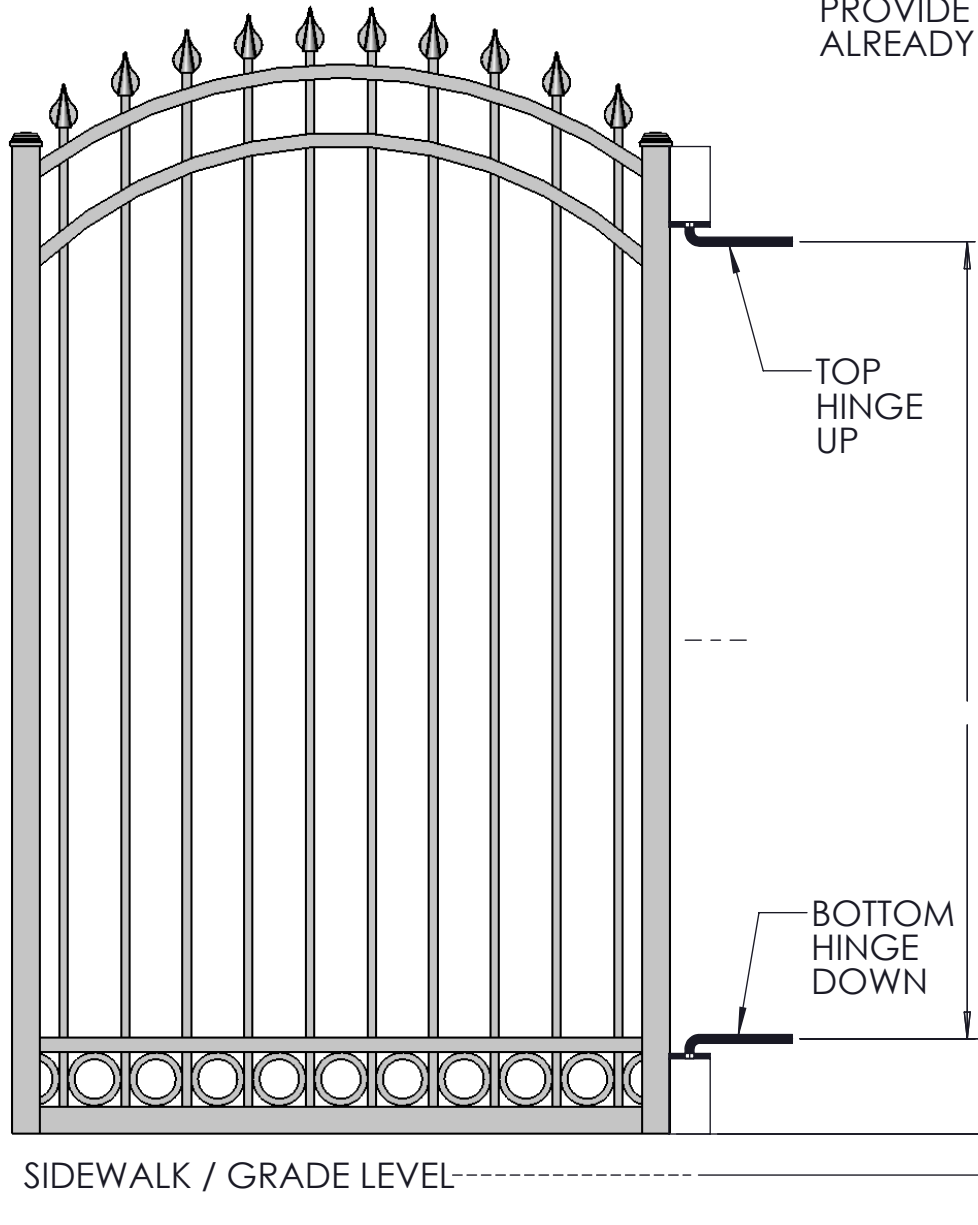

TOOLS REQUIRED:

- CORDLESS DRILL
- 13/16" or 7/8" SPADE BIT
- CRESCENT WRENCH

- WHEN MARKING THE HOLES ON YOUR WOODEN FENCE POST BE SURE TO CENTRE THEM ON THE POST AND MARK **BOTH SIDES** OF THE POST FOR MORE ACCURATE AND STRAIGHT HOLES. THIS WILL MAKE FOR A MUCH SMOOTHER MAN GATE INSTALL.

(3) CENTRE TO CENTRE OF THE 2 BARREL HINGES WILL GIVE YOU THE MEASUREMENT FOR THE UPPER HOLE. ***(ALWAYS DRILL THE BOTTOM HOLE FIRST!)***

(2) THIS MEASUREMENT ADDED TO THE GATE RISE WILL GIVE YOU CENTRE OF THE LOWER BARREL HINGE.

(1) GATE RISE (3" IS STANDARD)

*** IMPORTANT NOTE: ALWAYS WORK FROM THE BOTTOM UP!**